

DISPLAY HIGHLIGHTER

DH100A1

USER MANUAL







Chatsworth, California USA www.cyron.com

DISPLAY HIGHLIGHTER DH100A1

Thank you for choosing CYRON products. Please follow all the steps to assure proper installation and optimum usage of this device.

Contents

Locate all system components. If any of the components are missing or damaged contact CYRON before proceeding with installation.



1 X Light Engine 1 X Cord, Interconnect 3" Hook & Loop Fastener Coins

Possibilities

DH100A1 can be used to illuminate glass cases, glass shelves, POP stands, Acrylic countertops and many similar applications. It draws attention by combination of static and dynamic lights that are customizable by the user. One of the most important features is the ability to edge-light marquee signs. Standard and custom marquees are available directly from Cyron.

marquees are available directly from Cyron To create a larger sign multiple Display Highlighters can be combined to produce a larger marquee.





Cautions and Common practices

 
- Route and secure cords to prevent being pinched or damaged
- Keep the components and wires away from extreme heat, liquids, moving objects and any
 other physical ware and tare
- Do not place in a fully closed compartment smaller than 36 cubic inches (4"x6"x1.5")
- To comply with National Electrical Code (NEC) and to prevent fire danger, run the cords
 where they are accessible for examination. Cords should be visually examined periodically
 and immediately replaced when any damage is noted.

ONOT modify connectors and the internal components. Tampering with wirings may cause severe damage and voids factory warranty.

Installations ____

Before permanently installing the light determine its position for optimum performance. Make sure the white lights are shining where they are most effective. Allow clearance for the marquee if it interferes with any moving parts of the display. Position the unit so the green beacon lights are getting the most amount of attention. Mark this placement with a temporary marker or pencil.


Proceed with the permanent placement of the unit using the hook and loop fasteners.



- 1. Clean off dust and grease from the area hook and loops will be placed.
- 2. Apply the hook & loop coins to their mated sides that are on the bottom of the housing.
- 3. Peel off the liner from hook & loop coins.
- 4. Carefully place the unit on the display.
- 5. Press down for 5 seconds to promote tape adhesion.


Plug the power supply into the outlet. Plug power supply cord to the light unit.

Multiple units can be daisy chained to synchronize the same light pattern. Use the interconnect cord to plug units into each other to create such effect. Alternatively, multiple units can be connected in parallel so each can have its own setting while using one power supply to power al the units.

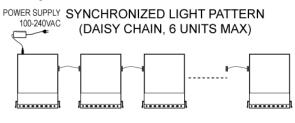

INDEPENDENT LIGHT PATTERN (PARALLEL, LIMITATION POWER SUPPLY RATING)

 POWER SUPPLY, HIGHER CURRENT



Operation _

Display Highlighter has 3 light zones:

- O White Illuminator light, illuminates the merchandise
- o **Green Beacon light,** brings attention to the display
- Blue Marquee, edge lights signage

It is capable of producing over 700 combinations of light patters by providing 10 modes in each light zone.

- Using a sharp object like a pen, press and hold MODE button for 2 seconds. One of the
 zones will flicker for 1 second. The unit is now in the programming mode and ready to
 change the functions of the zone that
 flickered

 MODE
 POWER
- Press and release the MODE button quickly to set the desired function from the chart below.
- 3. Repeat steps one and two to set remaining two zones.
- After 3 minutes of inactivity the unit will exit programming mode.
 Note: To reset all the zones back to factory settings press and hold MODE button for 5 seconds.

| | FUNCTION SETTING |
|---|--|
| A | Full brightness on all the time |
| В | 66% brightness on all the time |
| C | 33% brightness on all the time |
| D | Off |
| E | Flash 1 |
| F | Flash 2 (Same as Flash 1 but 50% dimmer) |
| G | Flash 3 (Same as Flash 1 but 2X speed) |
| Н | Fade, low speed |
| I | Fade, medium speed |
| J | Fade, fast speed |

Specifications _

Supply voltage range 10-12VDC

Power 3W max, 2W nominal

Working Temp -20 to 60°C

Dimensions 5" x 3.5" x 7/8" (126 x 88 x 21mm)

White light 140 lumens, 85CRI, 120 beam, 4000K, 120° beam

Total light output (3 zones) 320 lumens

Optional Accessories __

DH100-CRD30 Interconnect cord, 12" DH100-CRD7 Interconnect cord, 3" CON-Y2 2 way low voltage splitter CON-Y3 3 way low voltage splitter CON-DC4EXT 4ft extension cord, low voltage

Power supply, 18W, desktop, cord 10ft PS18-SP12D

Power supply, 30W w/DC switch desktop, cord 10ft PS30-SP12DS

Technical Support

techsupport@cyron.com 818-772-1900 x106

Warranty

Cyron warrants this product against any defects in materials or workmanship for a period of ONE (1) year from the date of purchase. The warranty covers normal usage as intended by the factory and does not cover misuse, abuse, accidents, or damages caused due to the acts of God. Proof of purchase is required.

ANY IMPLIED WARRANTIES. INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE THE REPAIR, REPLACEMENT, OR REFUND AS PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OF IMPLIED, IN NO EVENT SHALL CYRON, INC. BE LIABLE, WHETHER IN CONTRACT OR TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT, ACCESSORY OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS OR ACCESSORIES TO THE FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW.

Some states and jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or from one jurisdiction to another.

Please mail all warranty claims to: CYRON, Inc. 21029-C Itasca St., Chatsworth CA 91311 USA

warranty@cyron.com